

Handset Instructions

Operation Guide:

1: Normal Operation

Drive the desk to the desired height using the "↑" or "↓" button

2: Setting the memory

Press the "M" button till the displayer flashing and then press "1" button,

Position 1 is now stored

Repeat above procedure for positions 2,3,4

Then hold and press to operate the "1", "2", "3", "4" button and the desktop will stop at the desired.


3: System Initialization

If the system doesn't work when we use, we may need the system reset, to make the system initialized.

Reset procedure is as follows: press the "↑" and "↓" button together for about 15s then you can hear a beep, do not release the button and keep pressing the "↑" and "↓" button, lifting columns will go down to its lowest position, you will hear beep for three times, then a new initialization sequence can be run.

4: Notice

- 1: This product must meet the technical parameters in use.
- 2: Away from water and corrosion resistant gas.
- 3: Please contact us or our distributors if there is something wrong with the product.

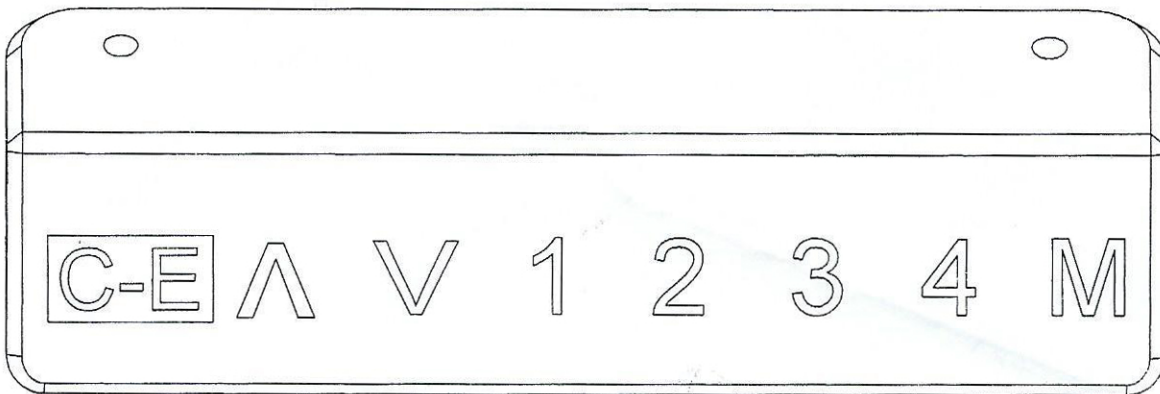

As above shown, add new switch function base on the premise that original keys function unchangeable ,procedure as follows:

1. Press the "1" "2" "M" buttons together for about 5 seconds, display "C-E" (flashing)---then continue to procedure 2,3 .
2. Press button "1" within 5 seconds, display "C" ,then switch to metric system MM---go into the general operation
3. Press button "2" within 5 seconds, display "E" then switch to British system Inch---- go into the general operation
4. If above procedures no further operate over 5 seconds , then will recover to the previous setting.