


HANDSET INSTRUCTIONS

Operation Guide

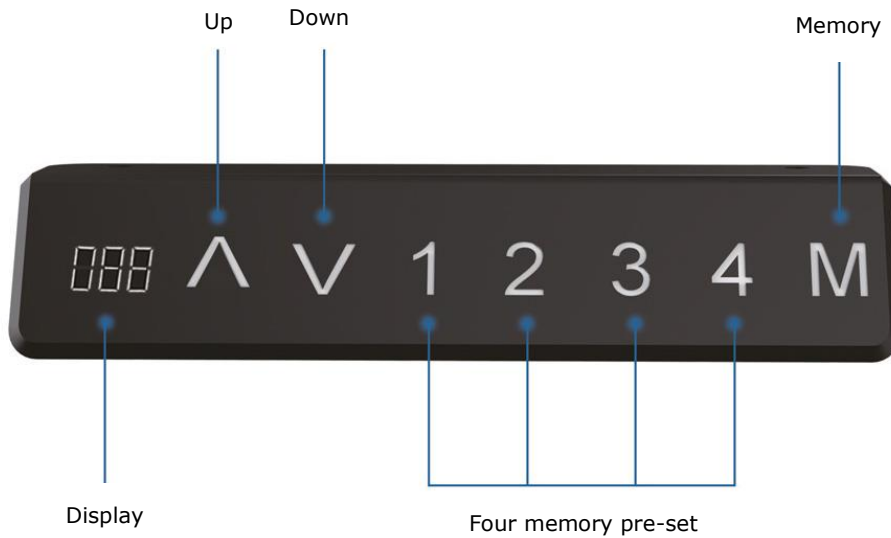

1: Normal Operation

When the frames are assembled, the digital handset displays 000, and the first step is to reset. Reset procedure is as follows: press the "↑" and "↓" button together for about 5 seconds and the desk will go down to its lowest position, then you can hear a beep, the new initialization sequence ran.

Drive the desk to the desired height using the "↑" or "↓" button

2: Setting the memory

Press the "M" button till the display is flashing and then press the "1" button, position 1 is now stored. Repeat above steps to set the memory for the other positions 2, 3 & 4.

3: INCH or CM

Press the "1", "2" & "M" buttons together for about 5 seconds, display "C-E" (flashing). Either Press button "1" display shows the desk is in metric mode (CM). Or Press button "2" display shows desk is in imperial mode (INCH).

4: System Initialization

If the system doesn't work, we may need to perform a system reset to initialize the system. The reset procedure is as follows: press the "↑" and "↓" button together for about 5 seconds until the display shows '000', then press the "↓" button until the desk reaches the lowest position and shows the height in the display. The initialization sequence ran.

5: Notice

- 1: This product must meet the technical parameters in use
- 2: Please keep the product away from water and corrosion resistant gas
- 3: Please contact us or our distributors if there is something wrong with the product